



TECHNICAL DATA

Area of Application : Plaster Surfaces, Interior Walls and Ceilings.

Covering Capacity : 3.71- 4.64 sq. mtr./L (40-50 sq. ft/lt)

Drying Time : 4-6 Hrs


DAMP CONTROL

SINGLE COAT WATERPROOFING SOLUTION



British Paints Damp Control is a Single Coat Waterproofing Solution for all your interior waterproofing problems. It creates a breathable layer of film to fight against dampness and efflorescence which does not allow water/moisture and other salts to enter into the wall surface.

PRODUCT FEATURES

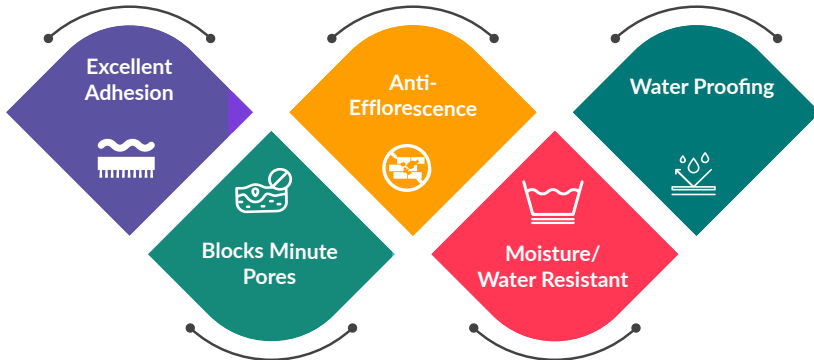

PACKS AVAILABLE



1 LTR 4 LTR

HOW TO APPLY

Performance of British Paints Damp Control depends on surface preparation & application as outlined below.

SURFACE PREPARATION

- Ensure that the surface is free from efflorescence before application. It should be free from oil, any loose dust particles, loose friable matters etc.
- Surface cracks less than 5 mm must be filled with British Paints Crack-Fix Paste as per recommendation.
- Before application surface must be in Saturated Surface Dry (SSD) condition.

APPLICATION

A. Fresh Painting

- Masonry surface needs to be fully cured before application and free from efflorescence.
- Apply a single coat of British Paints Damp Control by brush without dilution with a forced coverage of 40-50 sq. ft. /Lt. Allow it to dry for 4-6 hrs.
- For a smooth finish of topcoat, apply two coats of British Paints Acrylic Wall Putty & Allow it to dry for 4-6 hours. Rub with sand per 320. Wipe to clean and apply top coat as per recommendation.

B. Repainting/Renovation

Surface in good condition:

- Sand the surface with sand paper 180 and wipe it clean.
- Apply a single coat of British Paints Damp Control by brush without dilution with a forced coverage of 40-50 sq. ft. /Lt. Allow it to dry for 4-6 hrs.
- For a smooth finish of topcoat, apply 1 coat of British Paints Waterproofing Putty/British Paints Shield Wall Putty and apply top coat as per recommendation post drying.

Surface in damaged condition:

- Remove the existing putty till plaster level in the affected areas covering an additional one ft. distance across all sides.
- Ensure that the surface is free from efflorescence before application.
- Surface cracks less than 5 mm must be filled with British Paints Crack-Fix Paste.
- Apply a single coat of British Paints Damp Control by brush without dilution with a forced coverage of 40-50 sq. ft. /Lt. Allow it to dry for 4-6 hrs.
- For a smooth finish of top coat, apply 1 coat of British Paints Waterproofing Putty/British Paints Shield Wall Putty and apply top coat as per recommendation post drying.

(The information herein is given in good faith. Covering capacity is indicated on the basis of results obtained on a prepared smooth surface)

(Please note that this product's technical data sheet supersedes all previous versions.)